

There are three measurements we need for your Roman Blinds.  
Follow the steps below on how to measure up:

### INSIDE A WINDOW RECESS

#### Width:

Measure across the recess at several points and give the narrowest measurement.

Then minus 1cm for clearance so the blind will run freely (see E on the diagram)

#### Length:

Measure from the top of the recess to the bottom. It is advisable to do it at several points across the width to get the shortest measurement (see E on the diagram)

### OUTSIDE A WINDOW RECESS

#### Width:


Measure the width of the recess and add at least 5cms on each side for overlapping (see F on the diagram)

#### Length:

Measure from the required starting position above the window to the length you require, adding 5cm on the length

### CHAIN LENGTH

Length: Top of where the blind mechanism will sit to the floor.

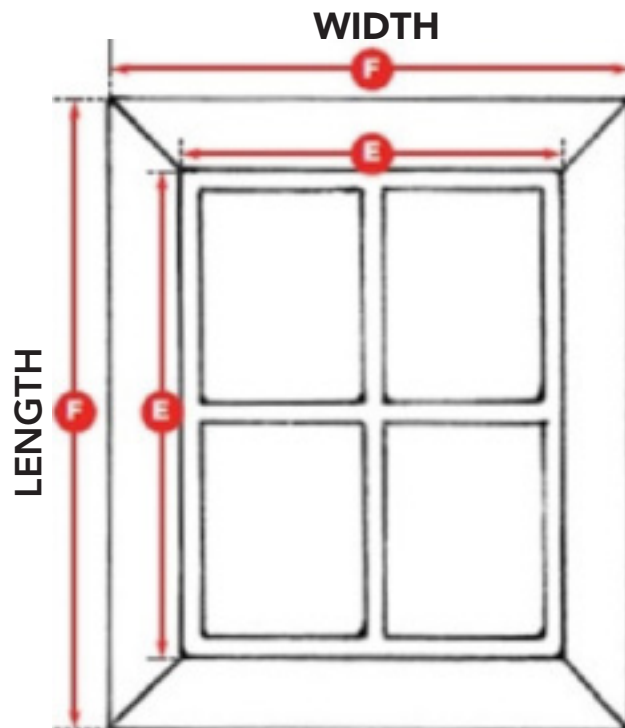

**E** - Measurements needed for recess fitted blind

**F** - Measurements needed for outside of recess fitted blind; adding 10cm to the width and 5cm to the length.